TP-LINK 150Mbps Wireless AP/Client Router Model TL-WR743ND

Rýchly inštalačný sprievodca





- 1. Pripojte váš počítač do LAN portu vášho routra pomocou Ethernet kábla.
- 2. Pripojte dodaný napájací adaptér do **POWER** konektora na routri a druhý koniec do štandardnej elektrickej zásuvky.
- 3. Stlačte vypínač na routri.

Poznámka:

- 1. Odporúčame umiestniť router mimo elektrických zariadení, ako stropné ventilátory, domáce bezpečnostné systémy, mikrovlnky alebo základne bezdrôtových telefónov.
- 2. Ak je vzdialenosť medzi zásuvkou a routerom príliš veľká na dodávanie napájania, môžete použiť riešenie "Power over Ethernet (PoE)" popísané v Apendix B: Nastavenie PoE.

2. Konfigurácia PC

- Pre Windows 7/Vista, kliknite "Start" (Štart) > "Settings" (Nastavenia) > "Control Panel" (Ovládací panel) > "View network status and tasks" (Zobraziť stav siete a úlohy)> "Manage network connection" (Spravovať sieťové pripojenie). Pre Windows XP/2000, kliknite "Start" (Štart) > "Control Panel" (Ovládací panel) > "Network and Internet Connections" (Sieťové a Internetové pripojenia) > "Network Connection" (Sieťové pripojenie)
- Pravý klik na "Local Area Connection" (Lokálna sieť) a potom kliknite na "Properties" (Vlastnosti).



3. Zvoľte "Internet Protocol (TCP/IP)" a kliknite na "Properties" (Vlastnosti).

ocal Area Connection Properties	4 Local Area Connection Properties	2
twoking	Beneral Authentication Advanced	
amed using	Connect using:	
Nevel Yukon 8868956 PCI-E Gipabit Bhenet Cantoller	IIII Realtak RTLG139 Family PCI Fast El?	origue.
Configure	This opmection uses the following items:	
Rise and Pinter Stains for Monast Networks	GaS Packet Scheduler	^
	M 1 Transfer Forces (10PAP)	3
- Internet Protocol Version 6 (TCP/IPv6)	¢	2
	Iostal Univotal P	honting
8 Unio-Layer Topology Discovery Responder *	Description	
instal. Unintial Properties	Transmission Cantrol Photoco Vintemet Photocol. Th wide area network protocol that provides communi- a cross diverse interconnected networks.	ve default cation
Transmission Control Protocol Internet Protocol. The default	Show icon in netification area when connected	
wide area network protocol that provides communication across diverse interconnected networks.	Notify gre when this connection has limited or no o	onneclivity
OK Cancel	K	Cancel

- Pre Windows 7/Vista Pre Windows XP/2000
- Zvoľte "Obtain an IP address automatically" (Získať IP adresu automaticky) a "Obtain DNS server address automatically" (Získať adresu DNS servera automaticky). Potom kliknite na "OK".

Internet Protocol Version 4 (TCP/Del) Properties	Internet Protocol (TCP/IP) Properties
General Alternate Configuration	General
You can get IP settings assigned automatically if your network supports this capability. Of hervine, you need to ask your network administrator for the appropriate IP settings.	You can get P cettings assigned automatically it your retwork supports this capability. (Demone your rest) to alk your retwork administrator for the appropriate IP uniting.
Schein en IP address autoriatically Then for following P address:	Qitain an IP address automatically Of the fit information IP address
P address:	IP address:
Sybrativality	Sybret mask:
Estadt paterwert	Default getreesy:
 Egran DNI server address automotically Use the following DNI server addresses 	Colptain DNS server address automatically
Enferred CAS server:	Parlamed DNS serves
ghansala (MS innon)	gilemate DNS server.
40ganced	Adjunced.
OK Canod	0K Cancel
Pre Windows 7/Vista	Pre Windows XP/2000

3. Konfigurácia routra

1. Otvorte váš webový prehliadač. Zadajte "http://192.168.1.1" a stlačte Enter.



2. Zadajte užívateľské meno a heslo (admin/admin) a kliknite "OK".



Po úspešnom prihlásení, kliknite na položku "Quick Setup" a kliknite na "Next" na pokračovanie.

TP-LIN	K.
Status Cutet Solup OSS Operation Mode Motorols Witcloss DHCP Forwarding Security Paronial Control	Quick Setup The guick Setup within you have to configure the basic network parameters. To configure plases click the liast button. To mit, plases click the liast button. Bit Nett
Access Control	

4. Zvoľte režim "**AP Client Router**" a kliknite na "**Next**". (Tu sa používa režim AP Client Router ako príklad.)

TP-LIN	ĸ
Status Quick Setup DSS	Quick Setup - Choose Operation Mode
Operation Mode	Please Choose Operation Mode Type:
Witeless	AP Client Reuter - VISP Client Router AP Reuter - VIselaco Brochand Reuter
DHCP Forwarding	
Security	Back Next
Parental Control Access Control	

5. Zvoľte typ pripojenia WAN a kliknite "**Next**" na pokračovanie.

P-LIN	K° 150M W
tos ck Solup S seriton Mode work viess cp warding warding withy enfal Control	Guest Satup - WARE Connection Types The Outh Refs preparaty to ref up your connection by a drift Mippet. Press totals the transmittion of the outh Presses Image: Mark - Press total connection by a drift Mippet. Image: Mark - Press total connection by a drift Mippet. Image: Mark - Press total connection by a drift Mippet. Image: Mark - Press total connection const appendixed. The drift Minget. Image: Mark - Press total connection const appendixed. The drift Minget.
cess Control tic Routing	Back Next

a) Ak zvolíte "**PPPoE**", prosím zadajte užívateľské meno a heslo od vášho WISP. Potom kliknite na "**Next**".

Rafus			
klick Setup	Quick Setup - PPPoE		
385			
peration Mode	User Name:	ucamama	
iet werk	December 1	stemene	
reless	Passwerk		

- b) Ak zvolíte "**Dynamic IP**", router automaticky príjme IP parametre od vášho WISP bez potreby zadávania akýchkoľvek parametrov.
- c) Ak zvolíte "Static IP", prosím zadajte "IP address" a "Subnet Mask" od vášho WISP. Potom kliknite na "Next".

TP-LIN	K'		
Status			
	Quick Setup - Static IP		
055			
Operation Mode	P Address:	0.0.0.0	
Network			
Wretess	SHORE MADE.	0.0.0.0	
DHCP	Default Gateway:	0.0.0.0	(Optional)
Forwarding	Primary DNS:	0.0.0.0	(Optional)
Security	Secondary DRS:	0.0.0 0	(Optional)
Perental Control			
Access Control	- 25		
Static Routing		Back	Next

6. Kliknite na tlačidlo "Search" na vyhľadanie dostupných bezdrôtových sietí.

Status			
	Quick Setup - Wireless		
Operation Mode	Please configure parameters of APC M	inde:	
Network	Fitase configure parameters of PC a		
Wenters	5540		
	BSSID:		Example:00-10-0F-11-22-33
forwording		Search	
Security	Key type:	None	*
Perental Control	WEP Index:		
Access Control	Auth type:		
Static Routing	Passwerk		
Bandwidth Control			
IP & MAC finding			
Dynamic DNS		Batk	vest.

7. Zvoľte SSID vašej cieľovej siete a kliknite na "Connect".

TP-LINK	۲						
Status							
Quick: Setup	AP List						1
Q55							
Operation Mede	AP Count 1						
Network	in essin	asin	Simal	Channel	Security	Chaose	
Wreless	1 00.15-05-11-22-33	WIRP	25dB	4	ON	Connect	
DHCP		11.01	1.040		p.r.	Jacobinets	
Forwarding							
Security							
Parental Control							
Access Control		E	lack R	lafrash			

8. SSID a BSSID bude automaticky doplnené do tabuľky bezdrôtových nastavení. Zvoľte "Key type" a zadajte "Password". Potom kliknite na "Next".

TP-LIN	<.			
Statun Gurck Setup QSS	Quick Setup - Wireless			
Operation Mode Network Wircloss DHC P Fermanding	Please configure parameters o SSID: BSSID:	IAPC Mede: WISP 00-10-0F-11-22-33 Search	Example 00-10-0F-11-22-33	
Security Parastal Control Access Control Static Routing Bandwidth Control	Key type: WEP Index: Authorspic Password:	None 1 Optim	3	
IP & MAC Binding Dynamic DNS System Tools		Back	d.	

 Kliknite na tlačidlo "Reboot" aby sa zmeny použili a dokončite rýchle nastavenie. (Odporúčame pokračovať na kapitole Apendix A na zabezpečenie vašej bezdrôtovej siete.)

TP-LINH	¢
Status	
Quick Setup	Quick Setup - Finish
QSS	
Operation Mode	Congratulational The Pourter is now connecting you to the Internet. For detail
Network	settings, please click other menus if necessary.
Wreless	The change of wireless config will not take effect until the Router reboot
DHCP	
Forwarding	
Security	Back Reboot
Parental Control	

Poznámka: Popis konfigurácie režimu AP router nájdete na priloženom CD.

Apendix A: Nastavenie bezdrôtovej bezpečnosti

 Zvoľte "Wireless > Wireless Security" stránku. Potom zvoľte "WPA-PSK/WPA2-PSK" a zadajte bezpečnostný kľúč dlhý 8 až 64 znakov (čísla alebo písmená) vo pola "PSK Password". Kliknite "Save" na pokračovanie.

TP-LIN	•	
1	181	DICK PT (*)
554.00	Hay 3	Disabled w
Garatiete	Has A	Doubled /*
Das Describen Winde Matterne Wennen Sertings Wennen Sertings Wennen MAC (Preving Wennen MAC (Preving Wennen MAC (Preving Wennen MAC (Preving	 NFA WFA2 Version Radio Serve F: Fadio Serve F: Fadio Favit Radio Proceed Groups (Mater Process) 	Adversity = Adversity = 1020 (19.00020, 0 media tor advadged 1912) 0 Ensempt Perspective Register Social Refe
(240° Forwarding Rescaling Forwardial Conditati	BPS-PSK-WPA2-PSK Weise Dx.Ophere	Adarah * Anavato *
Accies Control	PSKPanowst	Nex W11234567
Nation Hundrey Standard The Canading In A. WALE Canading Dynamic 1988 Nations Track	Group Ray Update Passes	TOU LON THE RECT INVALUES TOWNED T SHE IN TRACE IN AN AND THE SHE IN TRACE IN TRACE IN THE SHE INTERS AND THE SHE INTERS

Zvoľte "System Tools > Reboot" stránku. Potom kliknite na tlačidlo "Reboot" aby sa dokončilo nastavenie.



Apendix B: Nastavenie PoE



- 1. Vypnite všetky vaše sieťové zariadenia, vrátane vášho počítača, PoE injektora a routra.
- 2. Pripojte váš počítač do LAN portu vášho routra pomocou Ethernet kábla.
- 3. Pripojte WAN port vášho routra do PoE portu na PoE injektore pomocou Ethernet kábla.
- 4. Pripojte zadaný napájací adaptér do **DC** konektora PoE injektora a druhý koniec do štandardnej elektrickej zásuvky.

Poznámka:

- 1. Pasívny PoE injektor podporuje maximálnu dĺžku kábla až do 30 metrov.
- 2. Pre dlhšie napájané káble až do 100 metrov, prosím zvoľte TP-LINK 48V PoE adaptéry: TL-POE200, TL-POE150S alebo TL-POE10R.

Informácie o produktoch nájdete na našej oficiálnej webovej stránke http://www.tp-link.com.

Technická podpora

- Pre viac informácií pri odstraňovaní problémov, choďte na http://www.tp-link.com/support/faq.asp
- Na stiahnutie najnovšieho firmware, ovládačov, utilít a užívateľského manuálu, choďte na http://www.tp-link.com/support/download.asp

Preklad: Agem Computers spol. s.r.o.